
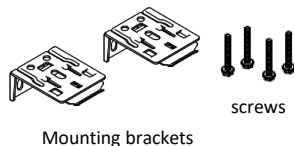




Simple Lift Cellular Shade Installation Instructions

IDENTIFY YOUR CELLULAR SHADE AND PARTS


your parts may vary, depending on the custom request and the size of the shade.

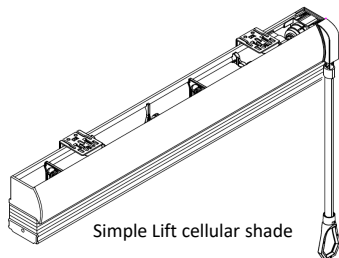

Shade width	Qty of brackets
$W \leq 39.5"$	2
$39.5" < W \leq 67"$	3
$67" < W \leq 96"$	4
$96" < W \leq 118"$	5


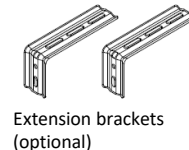


TOOLS AND PARTS YOU MAY NEED (not included)




1. Install the brackets


- Mark the bracket locations, separating the brackets evenly. Make sure all brackets are aligned and level with each other.
- For inside mount - Install the bracket with the hole at top center by using the included screw or with two holes at the top rear side by using #4 x 3/4" flat head wood screws (not included).
- For outside mount - install the bracket with two holes at the back side with included screws.
- Fasten the screws completely.
- Install the shade with the extension brackets (optional)
 - Install the extension bracket with at least 2 screws.
 - Attach the mounting brackets to the extension brackets with the screws.

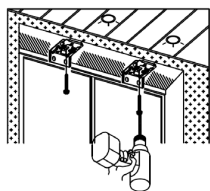

or

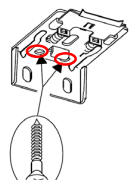


Inside Mount

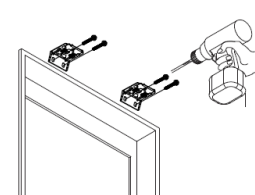



Outside Mount

Install the bracket with two #4 x 3/4" flat head wood screws (not included) in these two holes.

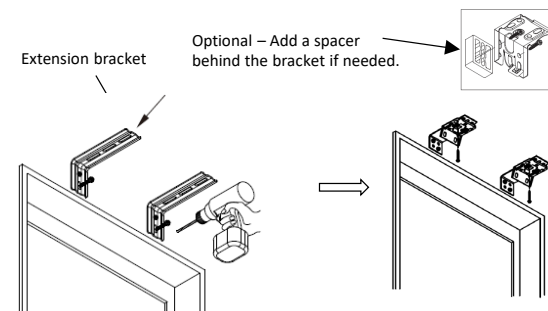


2. Attach the cell shade

- Position the headrail with the front lip resting on the top hooks of all brackets.
- Push the bottom of headrail firmly upward and toward the window until the groove at the top rear side of the headrail snaps into place.

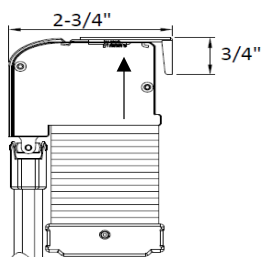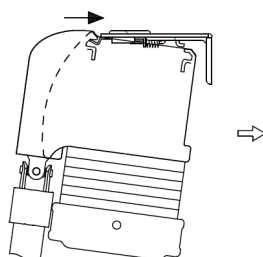


Mounting spaces

- Minimum mounting space - 1/2"
- Flush mounting space - 2-3/4"

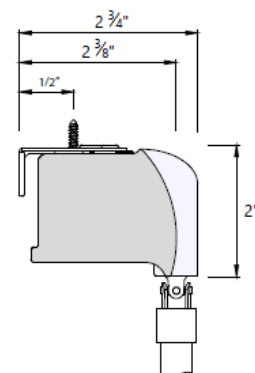

3. How to remove the shade from the brackets


- Raise the shade with the wand completely. Push the headrail toward to the wall with 2 hands.
- Tilt the backside of the headrail down.
- Once the back of the headrail clears the brackets, pull the headrail off the front of brackets.

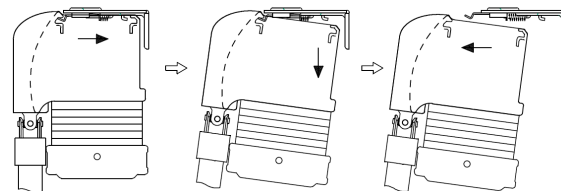



4. Use hold down brackets to keep the bottom rail in a fixed position (optional)

A hold down bracket secures a blind's bottom rail to the bottom of a door or window to prevent it from moving. These are usually only needed when installing blinds on doors and in RVs to help to prevent damage to your blinds, doors, and windows.

- The hold down bracket shall be installed to the wall when it is an outside mount or to the jamb of the window frame when it is an inside mount. Do not install hold down brackets on the sill of the window frame.
- Fully lower the blind and insert the hold down bracket pin into the hole at the side of the bottom rail end-cap, one hold down bracket per each end cap, then mark the location of each hold down bracket.
- Each hold down bracket should be secured with two screws.
- Place the hold down bracket pins into the end caps of the bottom rail to secure the bottom rail in place.

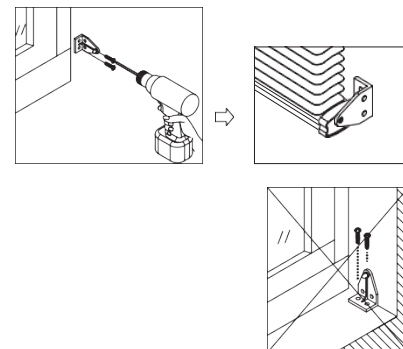

Wand Operation Instructions

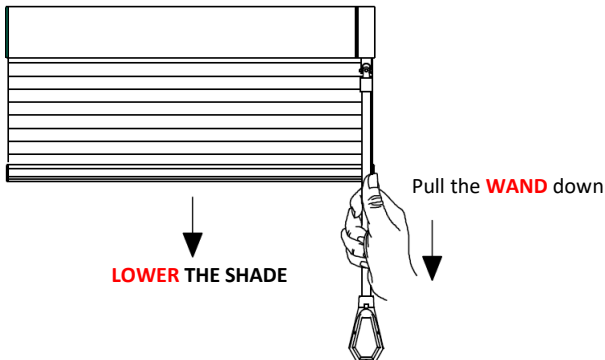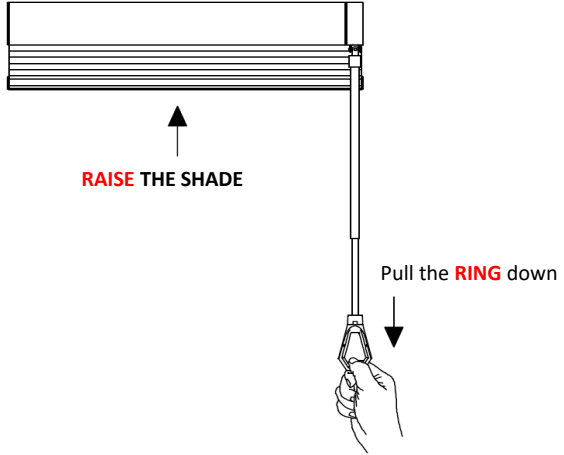TO LOWER THE SHADE	TO RAISE THE SHADE
Hold the WAND approximately ½ inch away from the bottom rail. Pull the WAND down and maintain grip—don't release. The bottom rail will automatically travel to the ordered drop height.	Simply pull the RING down several times until the bottom rail reaches your desired height.
	

Care And Clean Instructions

- To clean surface-level dust and dirt, lift it away by gently sweeping it across the fabric with a duster or vacuum it gently with the soft brush attachment.
- If any debris is trapped inside the fabric cells, blow it out with compressed air or with a hairdryer on a slow speed and cold mode.
- To clean away stains, you can try to blot the stain with a lint-free damp cloth (almost completely dry) and mild detergent if needed. Avoid scrubbing the fabric, as it may cause the fabric to pill. Using another cloth, blot the fabric dry to prevent water rings.
- Be sure not to submerge your cellular shades/ fabrics in water or over wet them, as they may fade and damage the shade.